



(WRING DIAGRAM)
(INDOOR UNIT)

ENC2 SW1	SWITCH	FOR NETWORK ADDRESS SETTING
		'0~F' of the S2 and 'ON/OFF' of the S1 mean the addresses of the different units, respectively

Note:
The functions in the dashed rectangle are available for particular Air-conditioner.

Please use 3-core shielded wire, and connect the shielded layer to the earth!

High wall fan coil	AWI
ELECTRICAL DRAWING	Model AWI-43 HW1
01.09.2011	AlpicAir